

## Super Dome™ Classic SB Packing Conversion Kits

Convert your cone packed stuffing boxes to Super Dome™ packing

### Installation Instructions

1. Remove upper gland
2. Remove 4 pieces of cone packing
3. Install bottom split bronze ring around polished rod with stenciled side down ↓. Install retainer ring around split bronze ring.
4. Next, install Teflon insert ring around the polished rod, then install the Super Dome™ packing carrier around the Teflon insert ring. Position split in Teflon insert ring 180° opposite the split in Super Dome™ packing carrier. Also alternate each carrier split 180° of previous carrier. Do this for all 3 pieces and generously grease. Make sure that the dome side of the Super Dome™ packing is facing down ↓ with threaded eyelet facing up ↑.
5. Install top split bronze ring around polished rod on top of Super Dome™ packing with stenciled side up ↑. Install retainer ring around split bronze ring.
6. Reinstall upper gland.

### Installation with ORG or ELUG

1. Follow steps 1-4 above.
2. Insert adapter ring with large flat area down.
3. Lightly grease rubber gasket and place in bottom of adapter ring.
4. Reinstall upper gland.

**CAUTION: DO NOT OVERTIGHTEN PACKING**




Kit used for  
Classic SB with  
standard LUG

Top Brass Ring  
w/ stencil side  
up

3 pieces Super  
Dome™  
packing

Bottom Brass  
Ring w/ stencil  
side down

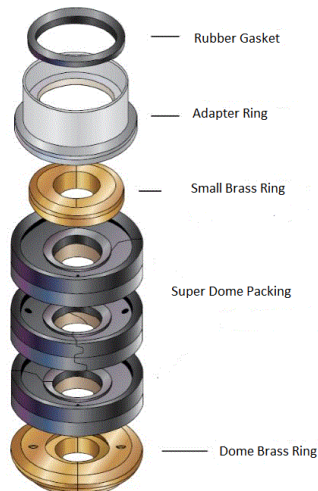

Rubber Gasket


Adapter Ring

Small Brass Ring

Super Dome Packing

Dome Brass Ring

Kit used for  
Classic SB with  
ORG//ELUG

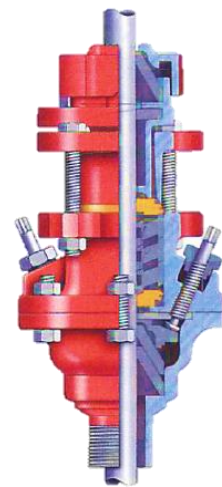

Classic DPSB